

Note: BigShot-HD 3X-W (wide angle) has a wide angle lens that takes longer to adjust when zooming in and zooming out as the wide angle lens covers more area – this is normal operation for a wide angle lens. We recommend that you use your presets to focus more quickly on participants.


Contents:

1. Safety Information- considerations **Caution: BigShot-HD must be plugged into a surge protector!**

- 📌 Before installing your BigShot-HD camera please read instructions carefully.
- 📌 Handle the BigShot-HD camera carefully to avoid damage to your optics.
- 📌 Avoid exceeding the camera operating limits – temperature, humidity power etc..
- 📌 Do **NOT** dismantle BigShot-HD cameras you will **Void** the warranty.
- 📌 Do not use harsh cleaners on the exterior casing of BigShot-HD cameras.
- 📌 Use a soft cloth or lens pad to wipe the lens with.

Primary features & functions

Video Conferencing Camera – rear connectivity visual:

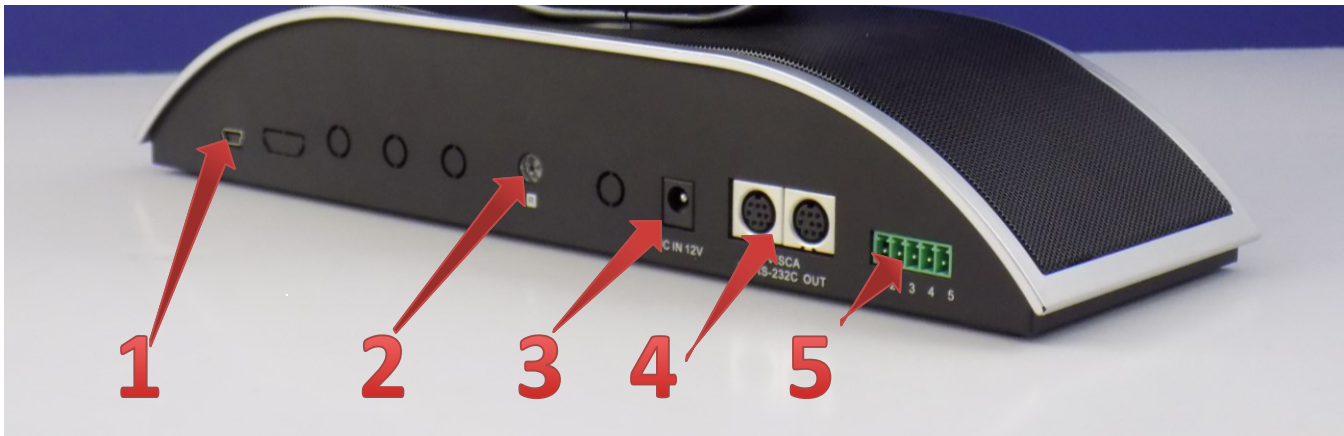

1. **Mini USB connection**
2. **Back IR**
3. **DC12V-1.2A power supply**
4. **RS232 In & RS232 Out**
5. **RS422 Interface**

BigShot-HD – PTZ functions

- 📌 360 degree continuous rotation and a 90 degree vertical rotation.
- 📌 10 Presets can be controlled with positioning accuracy up to +0.015 degrees. To position a preset – Pan, Tilt, Zoom to desired location in the room and press the preset button then the number (1 through 10) that you would like to keep that setting at.
- 📌 You can reboot the PTZ camera by pressing the reset button and it will restore all default functions.
- 📌 Built-in multi-protocol decoder – set the baud rate and camera address of each BigShot-HD through the dip switch on the bottom of the camera. Control the signal through the dip switch to choose RS-485 or RS232C for transmission.
- 📌 Video output is USB – there are no drivers required. "plug & play" operation

Note: 2 AAA batteries have been installed and your remote has been tested with this camera

Remote control functionality

Instructions for using the remote control:

- 1.) Power on/off button
- 2.) Select the camera you want 1 through 4 camera (note: you can control 4 BigShot-HD cameras with one remote)
- 3.) Preset control keys – move to the position that you would like to save then press Preset and the number that you would like the respective preset to correspond with. You can press “reset” to restore original settings.
- 4.) Preset Key
- 5.) 10X 1080P Adjustable Menu
- 6.) Controls the Pan-tilt function.
- 7.) Invert image for desktop or ceiling mount - press this to “invert” the image.
- 8.) Slow & Fast Control Zoom speed.



Note: The BigShot-HD PT does not allow you to invert the image for ceiling mounting